

## The LiftCall - Line *Brave Link Lift Watch series*



## Features

- The LiftCall - Line communicator base unit is powered by the telephone line only.
- The entire unit includes a microphone and a speaker (dimensions 135 x 66 x 23 mm)
- Connect an external microphone and speaker
- Connection (2xRJ45) above cab/under cab - microphone, speaker, button, LED
- Programming by selecting DTMF from phone, remotely from PC using BlackBox and analogue line, and locally from PC by connecting USB cable.
- Call status indication yellow / green, on the communicator horizontal / vertical and external output Open collector (OC) for LCD panels or circuit with LEDs with external power supply
- The buttons can be used to switch (NO) or NC (NC)
- Two-button connection, BTN1 is not blocked and allows multiple functions, BTN2 is an emergency call button from the elevator cab
- BLK blocking input, BTN2 and BLK inputs are always two - for a single contact or for a circuit in the 12 / 24V
- Special auto-blocking function (derived from the cab movement - Blocking input is connected to the door switch)
- The time for activation of each button is individually adjustable from 0.5 seconds to 39 seconds
- Up to 5 communicators can be connected in parallel.
- SwitchBoard is recommended to connect up to 3 communicators in parallel
- Automatic system functionality check - Service call (automatic call to preset number in 1 to 59 days)
- Enable acoustic ticking on a call recognition call
- Adjustable Tone, Flash, and Pause parameters
- Adjustable parameters for the tone detector and acoustic signaling
- Electronic acoustic parameter settings (no need to open the unit)
- You can program 6 numbers (16 digits - contains \*, #, Pause, Flash) without acknowledgment or confirmation
- Memory of the two last dialed numbers
- Technical call of four states - acknowledgment of presence of the technician in the lift, - Alarm end, emergency call button (BTN2) and acoustic disturbance (microphone \* / loudspeaker)
- Check the acoustic function, check the cab lock
- Call to engine room (BTN1 button function)
- The ability to set silencing during a call, technical call
- Fault indication according to EN 81-28\_2018

